



**External electrical connections**

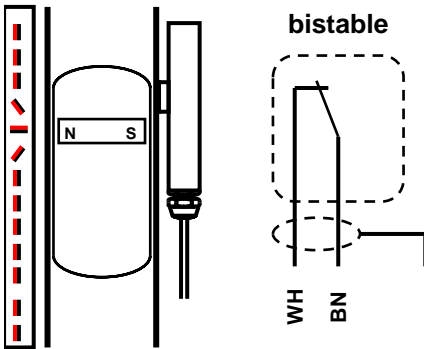

- Installed opposite to indication rail
- Cable exit downwards

**Dimensions**

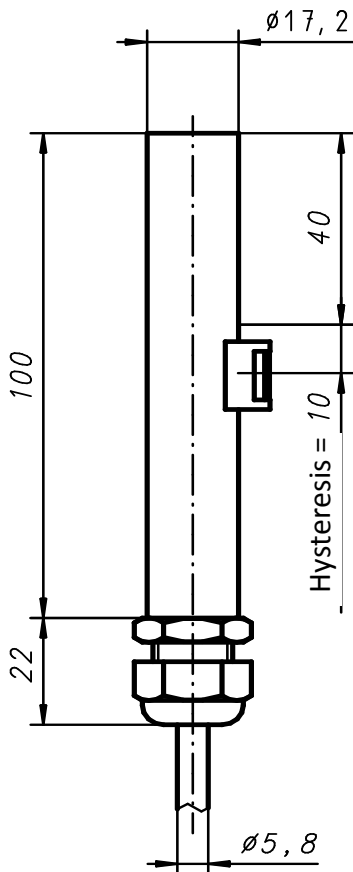

**Instruction manual**

**Function Magnetic switch for WEKA- VLI**

The magnetic switch is mounted outside of the float chamber opposite to the indication rail. The switching logic can be reversed by inverting the switch module with cable-exit upwards or by installing the switch module adjacent to the indication rail where technically authorised (see datasheet 20010501). The magnet inside the float activates the reed switch, when the liquid in the float chamber reaches that level.

Please refer to the safety guidelines.

<b>Product code</b>	<b>(standard)</b> 31130-NA/3	with 3m cable
	31130-NA/5	with 5m cable
	31130-NA/10	with 10m cable
	31130-NA/20	with 20m cable

**Switching logic** on/off, bistable

<b>Contact rating</b>	max.	250V
	max.	1.3A
	max.	80VA
	max.	80W

**Enclosure** IP68 - 5bar (EN 60529)

<b>Material</b>	
Housing	Stainless steel 316 /316L
Cable gland	PA6: grey, 3...8mm
Seal	Perbunan (NBR)
Cable	LiYCY/EB: blue, $\varnothing$ 5.8mm
Shield	shielded, but not connected
Cable cores	2 x 0,75mm <sup>2</sup>
Core colours	WH, BN
Type label	Polyester: silver, black printing

**Operating conditions**

Media temperature	Ambient temperature
-50°C...+150°C	-20°C...+80°C

Media temperature      Temperature of liquid within the float chamber  
Ambient temperature      Temperature of air around the magnetic switch

**Fixation**

When ordering level indicators with switches, hose clamps are included.  
When ordering switches as spare parts, hose clamps are never included and must be ordered separately.  
In case of ordering hose clamps pipe size must be indicated:

For pipe diameter	30...40mm	Article no.	80648
For pipe diameter	40...57mm and 57...80mm	Article no.	84043

**Note**

The switch is maintenance free.